


Rubber Suspension Blade Scraper LCS2-3Sl Type

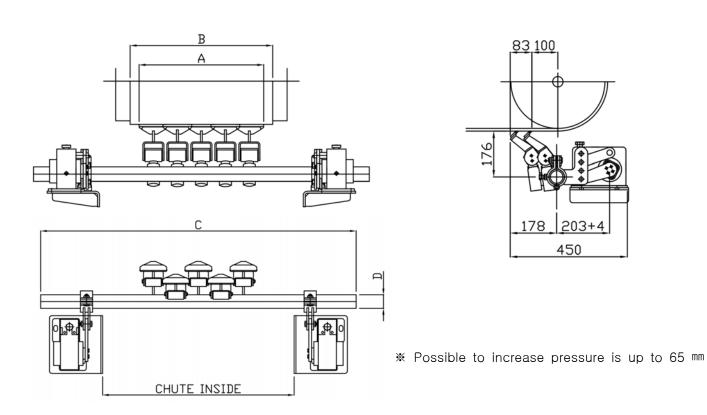

Model	Belt size	Tip Size	Module Q`ty	Body size	D
	A[mm]	B[mm]	Q`ty	C[mm]	
LCS2- 3S1	400	320	3	1200	- Ø60.5
	500	420	4	1300	
	550	420	4	1350	
	600	520	5	1400	
	750	620	6	1500	
	800	620	6	1600	
	900	720	7	1700	
	1000	820	8	1800	

Without applying pressure above drawing shows the scraper.


During installation, the installation manual is required.


This drawing LAUTEC CO. As an asset in a secret LAUTEC CO. Part, without the written consent of, or The disclosure of all, or should not be reproduced or copied.


Patent, copyright, and all rights are reserved.



C,P-TYPE BELT CLEANER- Installation Manual

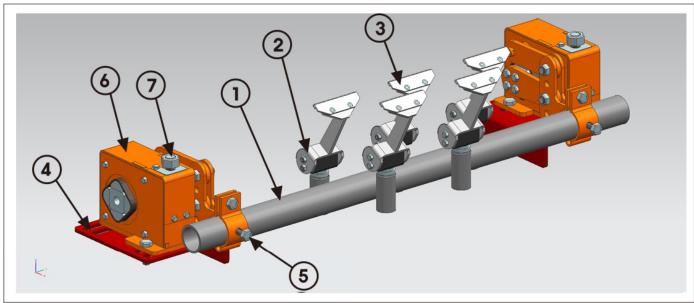

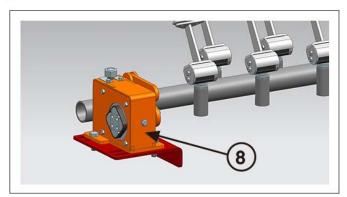

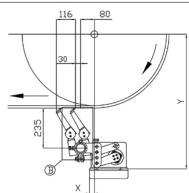

Product Specifications

- 1. CP Cleaner Body a high-pressure the pipe (STPG) on the molten-plated one that the-standard form referred to as 1
- 2. CP Cleaner Holder ②
- 3. CP Cleaner carbide tips 3
- 4. CP Cleaner installation plate 4
- 5. CP Cleaner Body fixed bolt ⑤
- 6. CP Cleaner pressurized the device 6
- 7. CP Cleaner pressure adjustment bolt 7
- 8. Pressurized After the adjustment fixed bolt 8

This drawing LAUTEC CO. As an asset in a secret LAUTEC CO. Part or all of the public without the prior written consent of, or Must not be reproduced or copied.



INSTALLATION

- 1. In accordance with the installation drawings Pulley Center 4 (mounting plate) is installed X. Marking Y is the distance.
- 2. 1 (Cleaner Body) in accordance with the installation drawings Shute enough to fit wall OPEN (B) causes.
- 3. 4 (installation plate) Marking is welded to the left and right side Shute. Four. 1 (Cleaner Body) and Shute wall where the cut surface and slide the belt three times (tip), and then make a horizontal Five times (fixed bolt) just tighten and fix.
- 5. "Zeroing" 7 (pressurized vault) return belt side and three times (Tip) of the front and back will be a match.
- 6. "Cleaner pressure" pressure on the side arrow to show a marked ↓ return if the grid scale pressure from the 2-3 is completed.
- 7. Pressure after the completion of eight times (pressure mounting bolts) to fix.
- 8. Cleaner efficient pressure drops should be pointed in the same way as before.